



Dutch Light & Sound Engineering D.L.S.E. / Synthrepair



Home	Quality Issue's
Synthrepair	SSM/CEM
Mixerrepair	Reset/Init
Amprepair	
Cabling	
The Repairshop	
The Studio	
Rental	
Links	
Electr.Parts	
Occasions	
Downloads	
Contact	



SYNTHREPAIR

Reset- & Initialize- Procedures

BRAND	MODEL	PROCEDURE
ALESIS		
ALESIS	ADAT	HOLD PLAY AND RECORD WHILE POWERING ON. { "DRUM ON" HRS WILL NOT BE RESET. }
ALESIS	ADAT-LX-20	HOLD RECORD WHILE POWERING ON. { "DRUM ON" HRS WILL NOT BE RESET. }
ALESIS	ADAT-XT	HOLD PLAY AND RECORD WHILE POWERING ON. { "DRUM ON" HRS WILL NOT BE RESET. }
ALESIS	ADAT-XT-20	HOLD PLAY AND RECORD WHILE POWERING ON. { "DRUM ON" HRS WILL NOT BE RESET. }
ALESIS	AI-2	HOLD STORE WHILE POWERING ON. { ADAT TAPE HEAD INFO WILL ALSO BE CLEARED. }
ALESIS	BRC	HOLD PLAY AND RECORD WHILE POWERING ON.
ALESIS	D4	HOLD VOICE AND OUTPUT WHILE POWERING ON.
ALESIS	DM5	HOLD VOICE AND OUTPUT WHILE POWERING ON.
ALESIS	HR-16	HOLD ERASE, DELETE AND RECORD WHILE POWERING ON.
ALESIS	HR-16B	HOLD ERASE, DELETE AND RECORD WHILE POWERING ON.
ALESIS	M-20	HOLD PLAY AND RECORD WHILE POWERING ON. { "DRUM ON" HRS WILL NOT BE RESET. }
ALESIS	MIDIVERB 4	HOLD 'D' AND 'PROG' WHILE POWERING ON.
ALESIS	MIDIVERB III	HOLD STORE AND INT PROG WHILE POWERING ON.
ALESIS	MMT-8	HOLD ERASE, PAGE UP AND PAGE DOWN WHILE POWERING ON.
ALESIS	Q-20	SOFT RESET: HOLD PROGRAM AND COMPARE AND POWER ON. (SETS GLOBAL TO DEFAULT, CLEARS EDIT BUFFER, LEAVES USER MEMORY INTACT).
ALESIS	Q-20	HARD RESET: HOLD "PROGRAM", "COMPARE" AND "-BLOCK" AND POWER ON. (SETS ALL FUNCTIONS TO DEFAULT AND CLEARS USER MEMORY).
ALESIS	QS6	HOLD KEYPADS '0' AND '3' WHILE TURNING ON POWER.
ALESIS	QS6 KEYBOARD	HOLD KEYPADS '0' AND '3' WHILE TURNING ON POWER.
ALESIS	QS7	HOLD KEYPADS '0' AND '3' WHILE TURNING ON POWER.
ALESIS	QS8	HOLD KEYPADS '0' AND '3' WHILE TURNING ON POWER.
ALESIS	QSR	HOLD BOTH SIDES OF "CURSOR" BUTTON WHILE POWERING ON.
ALESIS	QUADRASYNTH KBD5	HOLD DATA BUTTONS '1' AND '4' WHILE POWERING ON. (CLEARS EDIT BUFFER ONLY; THERE IS NO HARD RESET).
ALESIS	QUADRAVERB	HOLD BYPASS AND PROGRAM THEN POWER ON.
ALESIS	QUADRAVERB 2	SOFT RESET: HOLD PROGRAM AND COMPARE AND POWER ON. (SETS GLOBAL TO DEFAULT, CLEARS EDIT BUFFER, LEAVES USER MEMORY INTACT).
ALESIS	QUADRAVERB 2	HARD RESET: HOLD "PROGRAM", "COMPARE" AND "-BLOCK" AND POWER ON. (SETS ALL FUNCTIONS TO DEFAULT AND CLEARS USER MEMORY).
ALESIS	QUADRAVERB GT	HOLD BYPASS AND PROGRAM WHILE TURNING ON THE POWER.
ALESIS	S4 SOUND MODULE	HOLD DATA BUTTONS '1' AND '4' WHILE POWERING ON. (CLEARS EDIT BUFFER ONLY; THERE IS NO HARD RESET).
ALESIS	S8 SOUND MODULE	HOLD DATA BUTTONS '1' AND '4' WHILE POWERING ON. (CLEARS EDIT BUFFER ONLY; THERE IS NO HARD RESET.) <
ALESIS	SR-16	HOLD PLAY AND ERASE WHILE TURNING ON POWER.
ALESIS	WEDGE	HOLD BYPASS AND PROG WHILE TURNING ON THE POWER.
ALESIS	X2 CONSOLE	HOLD 'ALT', 'ERASE FWD' AND 'DEC' WHILE POWERING ON. (THIS IS SOFT RESET; FACTORY MUTE PARAMETERS WILL BE LOADED INTO MEMORY.)
ART		
ART	ALPHA	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	ALPHA 2.0	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	BCC	HOLD STORE, PARAMETER, AND VALUE BUTTONS + POWER ON.
ART	DRX	PRESS PRESET DOWN, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	DRX 2100	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	DRX 2100 SE	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	DST 820	PRESS PREAMP SELECT, PARAMETER SELECT, AND SAVE SIMULTANEOUSLY.
ART	DST 830	PRESS PREAMP SELECT, PARAMETER SELECT, AND SAVE SIMULTANEOUSLY.
ART	DST-4	PRESS DISTORTION SELECT, PARAMETER EDIT, AND SAVE SIMULTANEOUSLY.
ART	DST-EIGHTY/EIGHTY	PRESS DISTORTION SELECT, PARAMETER EDIT, AND SAVE BUTTONS SIMULTANEOUSLY.
ART	DXR ELITE	PRESS BANK, SOFT KEY, AND BYPASS BUTTONS SIMULTANEOUSLY.
ART	ECC	HOLD STORE, PARAMETER, AND VALUE BUTTONS + POWER ON.
ART	EFFECTS NETWORK	PRESS VALUE, SAVE, AND BYPASS BUTTONS SIMULTANEOUSLY.
ART	FXR ELITE	PRESS PRESET UP, DRY KILL, AND BYPASS BUTTONS SIMULTANEOUSLY.
ART	FXR ELITE II	PRESS MIX, STORE, AND BYPASS BUTTONS SIMULTANEOUSLY.
ART	MULTIVERB	PRESS PRESET DOWN, 0, AND 4 SIMULTANEOUSLY.
ART	MULTIVERB ALPHA SE	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	MULTIVERB EXT	PRESS PRESET DOWN, 0, AND 4 SIMULTANEOUSLY.
ART	MULTIVERB II	PRESS PRESET DOWN, 0, AND 4 SIMULTANEOUSLY.
ART	MULTIVERB IIIITD>	PRESS PRESET DOWN, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	MULTIVERB LT	No factory reset, remove battery for more than 5 hours.
ART	MULTIVERB LTX	No factory reset, remove battery for more than 5 hours.
ART	NIGHT BASS	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	NITRO	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	PRO GATE	PRESS BYPASS, 8, AND SELECT SIMULTANEOUSLY.
ART	PROVERB	No factory reset. remove battery for more than 5 hours.
ART	PROVERB 200	No factory reset. remove battery for more than 5 hours.
ART	RXR ELITE	PRESS BANK, DRY KILL, AND BYPASS BUTTONS SIMULTANEOUSLY.
ART	SGE	HOLD PRESET DOWN, ADD EFFECT, AND MIDI/UTILITY WHILE POWERING ON.
ART	SGE MACH II	PRESS PRESET DOWN, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	SGX 2000	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	SGX 2000 EXPRESS	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	SGX LT	No factory reset, remove battery for more than 5 hours.
ART	SGX NIGHTBASS SE	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	SGX T2	PRESS PRESET, 0, AND 4 BUTTONS SIMULTANEOUSLY.
ART	X12	PRESS UP, 2, AND 5 PADS SIMULTANEOUSLY.
ART	X15 ULTRAFOOT	PRESS UP, 1, AND 5 PADS SIMULTANEOUSLY.

BOSS		
BOSS	SE50	Power on whilst holding down PARAM UP and VALUE UP. Press WRITE, wait for three seconds and the press WRITE again
DIGITECH		
DIGITECH	DHP 33	PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, TURN EITHER DATA KNOB COUNTER-CLOCKWISE, THEN PRESS STORE.
DIGITECH	DHP 55	PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER EDIT, THEN LOAD.
DIGITECH	DSP 128	HOLD PARAMETER EFFECT AND SELECT, THEN POWER ON.
DIGITECH	DSP 128+	HOLD PARAMETER DOWN AND LEFT, THEN POWER ON.
DIGITECH	DSP 256	HOLD UTILITY, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	DSP 256XL	HOLD UTILITY, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	FX 7	PRESS/HOLD STORE, POWER ON, WAIT UNTIL "RS" APPEARS IN THE DISPLAY THEN RELEASE STORE.
DIGITECH	G7	PRESS AND HOLD PROGRAM, POWER ON THEN PRESS THE STORE BUTTON.
DIGITECH	GFX 1	HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	GSP 21	HOLD TITLE BUTTON, POWER ON.
DIGITECH	GSP 21 LEGEND	HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	GSP 21 PRO	HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	GSP 2112	HOLD THE PREAMP BUTTON, POWER ON. WHEN THE ASTERISK APPEARS IN THE TOP OF THE DISPLAY, PRESS THE MOD BUTTON.
DIGITECH	GSP 5	HOLD PARAMETER DOWN THEN POWER ON.
DIGITECH	GSP 7	HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	GSP2101	HOLD ACCESS 1 BUTTON, POWER ON. AFTER * APPEARS IN THE UPPER LEFT OF THE LCD PRESS PROGRAM UP
DIGITECH	IPS 33	HOLD BOTH FUNCTION SELECT BUTTONS THEN POWER ON.
DIGITECH	IPS 33B	PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER DOWN, THEN STORE.
DIGITECH	LEGEND II	HOLD STORE, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF THE LCD PRESS PARAMETER UP.
DIGITECH	MEQ 14	HOLD PROGRAM BUTTON THEN POWER ON.
DIGITECH	MEQ 28	HOLD PROGRAM BUTTON THEN POWER ON.
DIGITECH	MEQ 7	HOLD PROGRAM BUTTON THEN POWER ON.
DIGITECH	MSP 4	HOLD THE DOWN AND LEFT BUTTONS THEN POWER ON.
DIGITECH	PMC 10	PRESS AND HOLD FOOTSWITCH "ONE", POWER ON, THEN PRESS THE "SELECT" FOOTSWITCH.
DIGITECH	RP 1	HOLD UTILITY BUTTON, POWER ON, THEN PRESS PARAMETER UP.
DIGITECH	RP 10	HOLD NAME, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PROGRAM UP.
DIGITECH	RP 12	HOLD NAME, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PROGRAM UP.
DIGITECH	RP 5	HOLD PARAMETER SELECT UP BUTTON THEN POWER ON.
DIGITECH	RP 6	HOLD PARAMETER SELECT UP BUTTON THEN POWER ON.
DIGITECH	S-5000	PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER EDIT, THEN LOAD.
DIGITECH	STUDIO 400	PRESS AND HOLD THE "1" BUTTON, POWER ON. WHEN THE ASTERISK APPEARS IN THE TOP OF THE DISPLAY, PRESS PROGRAM.
DIGITECH	STUDIO QUAD	PRESS AND HOLD THE "1" BUTTON, POWER ON. WHEN THE ASTERISK APPEARS IN THE TOP OF THE DISPLAY, PRESS PROGRAM.
DIGITECH	SV 5	PRESS UTILITY BUTTON, SELECT THE INIT MENU, PRESS THE STORE BUTTON TWICE (AS PROMPTED).
DIGITECH	TEC 8	PRESS AND HOLD BOTH LOW EQ AND MID EQ, POWER ON.
DIGITECH	TSR 12	HOLD NAME + POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PROGRAM UP.
DIGITECH	TSR 24	HOLD ACCESS 1 BUTTON, POWER ON. AFTER * APPEARS IN THE UPPER LEFT OF THE LCD PRESS PROGRAM UP.
DIGITECH	TSR 6	PRESS AND HOLD EQ BUTTON, POWER ON. WAIT FOR "FA" TO APPEAR IN THE DISPLAY THEN PRESS STORE. NOTE: "FH" WILL APPEAR BRIEFLY TO ACKNOWLEDGE RE-INITIALIZATION.
DIGITECH	VALVE FX	HOLD STORE, POWER ON. AFTER * APPEARS IN THE UPPER LEFT CORNER OF LCD PRESS PARAMETER UP.
DIGITECH	VHM 5	PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER DOWN, THEN STORE.
DIGITECH	VOCALIST II	PRESS UTILITY BUTTON, SCROLL TO THE FACTORY RESTORE MENU, PRESS PARAMETER DOWN, THEN STORE.
DIGITECH	XP PEDALS	PRESS/HOLD THE BYPASS/(HOLD)TUNER FOOTSWITCH AND POWER ON.
ENSONIQ		
ENSONIQ	DP-PRO	HOLD SYSTEM BUTTON AND PRESS CANCEL. RELEASE BOTH BUTTONS, PRESS ENTER.
ENSONIQ	DP/2	HOLD SYSTEM/MIDI AND PRESS THE "B" BUTTON, THEN RELEASE BOTH. PRESS RIGHT ARROW ONCE. PRESS WRITE BUTTON AT PROMPT.
ENSONIQ	DP/4	HOLD SYSTEM/MIDI AND PRESS THE "B" BUTTON, THEN RELEASE BOTH. PRESS RIGHT ARROW ONCE. PRESS WRITE BUTTON AT PROMPT.
ENSONIQ	DP/4+	HOLD SYSTEM/MIDI AND PRESS THE "B" BUTTON, THEN RELEASE BOTH. PRESS RIGHT ARROW ONCE. PRESS WRITE BUTTON AT PROMPT.
ENSONIQ	ESQ-M	PRESS PARAM, PRESS STORAGE. HOLD SCROLL, PRESS MASTER. RELEASE BOTH, SCROLL TO SELECT MEMORY PRESET PAGE. HOLD SCROLL, PRESS STORAGE. RELEASE BOTH, PRESS ().
ENSONIQ	FIZMO	HOLD THE SAVE BUTTON AND PRESS COMPARE. PRESS THE YES BUTTON AT THE PROMPT.
ENSONIQ	FIZMO RACK	HOLD THE SAVE BUTTON AND PRESS COMPARE. PRESS THE YES BUTTON AT THE PROMPT.
ENSONIQ	KS-32	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	KT-76	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD THE UPPER 9 BUTTON AND THEN PRESS THE LOWER 9.RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	KT-88	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD THE UPPER 9 BUTTON AND THEN PRESS THE LOWER 9.RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	MR-61/76	HOLD THE ERASE BUTTON (IN THE SONG EDITOR SECTION) AND POWER ON.
ENSONIQ	MR-RACK	HOLD SAVE AND PRESS ENTER, THEN PRESS ENTER AT THE PROMPT.
ENSONIQ	SD-1	HOLD PRESET BUTTON AND PRESS SOFT #1 BUTTON (UPPER LEFT CORNER OF SCREEN). RELEASE BOTH, PRESS YES AT THE PROMPT.
ENSONIQ	SQ-1 (21 VOICE)	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	SQ-1/32	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	SQ-2 (21 VOICE)	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	SQ-2/32	PRESS EDIT/SEQUENCES (PRESETS). PRESS AND HOLD BANK 9 (SYSTEM) AND THEN PRESS SCREEN 9. RELEASE BOTH AND PRESS YES AT THE PROMPT.
ENSONIQ	SQ-80	HOLD THE RECORD BUTTON AND PRESS THE #1 SOFT BUTTON (UPPER LEFT CORNER OF SCREEN). RELEASE BOTH BUTTONS, PRESS YES AT THE PROMPT.
ENSONIQ	SQ-R	HOLD SYSTEM BUTTON. QUICKLY PRESS "NO" THEN RELEASE BOTH BUTTONS. PRESS YES AT PROMPT.
ENSONIQ	TS-10	HOLD PRESETS BUTTON AND PRESS SOFT 1 BUTTON (UPPER LEFT CORNER OF DISPLAY). RELEASE BOTH BUTTONS. SELECT YES AT THE PROMPT.
ENSONIQ	TS-12	HOLD PRESETS BUTTON AND PRESS SOFT 1 BUTTON (UPPER LEFT CORNER OF DISPLAY). RELEASE BOTH BUTTONS. SELECT YES AT THE PROMPT.
ENSONIQ	VFX	HOLD PRESETS BUTTON, PRESS SOFT 1 BUTTON (UPPER LEFT CORNER OF SCREEN). SELECT YES AT PROMPT.
ENSONIQ	VFX/SD	HOLD PRESET BUTTON AND PRESS SOFT #1 BUTTON (UPPER LEFT CORNER OF SCREEN). RELEASE BOTH, PRESS YES AT THE PROMPT.
ENSONIQ	ZR-76	HOLD THE ERASE BUTTON (IN THE SONG EDITOR SECTION) AND POWER ON.
KORG		
KORG	01W	HOLD RESET AND COMPARE THEN POWER ON.
KORG	01WFD	HOLD RESET AND COMPARE THEN POWER ON.
KORG	A1	HOLD WRITE AND -1 THEN POWER ON.
KORG	A2	HOLD DOWN ARROW AND UP ARROW, POWER ON, PRESS "E" (YES).
KORG	A3	HOLD DOWN ARROW AND UP ARROW, POWER ON, PRESS "E" (YES).
KORG	A4	HOLD WRITE AND BYPASS, THEN POWER ON.
KORG	AM8000-R	HOLD FX1 AND FX2 THEN POWER ON.
KORG	C-505	MIDI/TRANPOSE + SPLIT AND RESTART UNIT.
KORG	DDD-1	HOLD YES AND NO, THEN POWER ON.
KORG	DL8000-R	HOLD "MS/D" AND "HOLD", THEN POWER ON.
KORG	DS-8/707	HOLD UP AND DOWN, THEN POWER ON.
KORG	I1	HOLD PROGRAM AND DISK, THEN POWER ON.
KORG	I2	HOLD ARR PLAY AND EDIT STYLE THEN POWER ON.

KORG	I3	HOLD ARR PLAY AND EDIT STYLE THEN POWER ON.
KORG	I30	HOLD ARRANGE PLAY AND GLOBAL, THEN POWER ON.
KORG	I4S	HOLD ARR. PLAY AND PROGRAM, THEN POWER ON.
KORG	I5M	HOLD ARR. PLAY AND GLOBAL, THEN POWER ON.
KORG	I5S	HOLD ARR. PLAY AND GLOBAL, THEN POWER ON.
KORG	IH	HOLD DETUNE AND BASS, THEN POWER ON.
KORG	IS40/50/I40M	HOLD ARR. PLAY AND GLOBAL, THEN POWER ON.
KORG	KARMA	HOLD ENTER AND 0, THEN POWER ON.
KORG	M1	HOLD INT, CARD, AND COMBI THEN POWER ON.
KORG	M1R	HOLD INT, PROG, AND COMBI THEN POWER ON.
KORG	M3R	PAGE 5D OF GLOBAL MODE.
KORG	N264	HOLD ENTER AND 7, THEN POWER ON.
KORG	N364	HOLD ENTER AND 7, THEN POWER ON.
KORG	O5RW	HOLD +1 AND -1 THEN POWER ON.
KORG	SG-PROX	HOLD PROGRAM AND PIANO 1, THEN POWER ON.
KORG	SG-RACK	HOLD EDIT AND A4, THEN POWER ON.
KORG	T SERIES	HOLD LOWER KEYPAD 0 AND PROG A, POWER ON, AND THEN IMMEDIATELY TURN OFF.
KORG	TR-RACK	HOLD EDIT AND A4, THEN POWER ON.
KORG	TRITON	HOLD ENTER AND 0, THEN POWER ON.
KORG	TRITON RACK	HOLD ENTER AND 0, THEN POWER ON.
KORG	X3	HOLD ENTER AND CURSOR DOWN THEN POWER ON.
KORG	X3R	HOLD ENTER AND CURSOR DOWN THEN POWER ON.
KORG	X5	HOLD +1 AND -1, THEN POWER ON.
KORG	X5D	HOLD +1 AND -1 THEN POWER ON.
KORG	X5DR	HOLD +1 AND -1 THEN POWER ON.
KORG	Z1	HOLD SW1 AND SW2, THEN POWER ON.
KORG	Z1EX	HOLD SW1 AND SW2, THEN POWER ON.
KURZWEIL		
KURZWEIL	K2000	HOLD "1", "2" AND "3" BUTTONS AND POWER ON. AFTER POWER UP PRESS ENTER. (EXCEPT V1.0 OS)
KURZWEIL	K2000	OS VERSION 1.0: POWER OFF AND UNPLUG. REMOVE BATTERIES FOR @ 60-90 MINUTES. REINSTALL BATTERIES. POWER ON.
KURZWEIL	K2500	AT POWER ON WHEN SCREEN DISPLAYS "PLEASE WAIT" PRESS THE EXIT BUTTON. AT MENU, SELECT HARD RESET AND FOLLOW DIRECTIONS.
OBERHEIM		
OBERHEIM	MATRIX-6	HOLD STORE WHILE POWERING ON.
PEAVEY		
PEAVEY	ADDVERB	HOLD THE - AND 5 KEYS THEN POWER ON.
PEAVEY	ADDVERB II	HOLD THE - AND 5 KEYS THEN POWER ON.
PEAVEY	ADDVERB III	HOLD THE ADD/DEL AND GLOBAL BUTTONS, POWER ON.
PEAVEY	AEQ 2800	HOLD THE MIDI AND ASSIGN KEYS THEN POWER ON.
PEAVEY	AUTOGRAPH	HOLD THE MIDI AND ASSIGN KEYS THEN POWER ON.
PEAVEY	BASSFEX	HOLD THE PLAY AND GLOBAL BUTTONS THEN POWER ON.
PEAVEY	CEQ 28	HOLD THE MIDI AND ASSIGN KEYS THEN POWER ON.
PEAVEY	CEX 4	HOLD THE MASTER AND STORE/MEMORY BUTTONS THEN POWER ON.
PEAVEY	CEX 4L	HOLD THE MASTER AND STORE/MEMORY BUTTONS THEN POWER ON.
PEAVEY	CYBERBASS (MODULE)	HOLD THE PROGRAM AND RIGHT CURSOR BUTTONS THEN POWER ON.
PEAVEY	DPM 2	HOLD 0 BUTTON, PRESS ENTER. RELEASE BOTH BUTTONS AND PRESS ENTER.
PEAVEY	DPM 4	HOLD SAVE BUTTON, PRESS PAUSE. PRESS ENTER WHEN PROMPTED.
PEAVEY	DPM C8	HOLD THE 0 AND ENTER BUTTONS, POWER ON, WAIT FOR THE "UNIT INITIALIZED" DISPLAY THEN RELEASE THE BUTTONS.
PEAVEY	DPM C8P	HOLD THE 0 AND COPY BUTTONS, POWER ON, WAIT FOR THE "UNIT INITIALIZED" DISPLAY THEN RELEASE THE BUTTONS.
PEAVEY	DPM SI	TURN POWER ON. HOLD '0' AND PRESS ENTER. PRESS ENTER AT THE PROMPT TO RE-INITIALIZE KEYBOARD.
PEAVEY	DSR 1000	HOLD THE - AND 5 KEYS THEN POWER ON.
PEAVEY	LIBRARIAN	HOLD LOAD, SAVE, AND UTIL BUTTONS AND POWER ON.
PEAVEY	MAP 8X4	HOLD BYPASS + POWER WHILE PLUGGING UNIT IN.
PEAVEY	MFP 2128/MIDI MANA	HOLD + AND - KEYS THEN POWER ON
PEAVEY	MIDI MANAGER	HOLD + AND - KEYS THEN POWER ON.
PEAVEY	MIDI MASTER	HOLD FUNCTION AND PROC A KEYS THEN POWER ON.
PEAVEY	MIDI MASTER II	HOLD FUNCTION AND PROC A KEYS THEN POWER ON.
PEAVEY	MIDI STREAMER	HOLD THE RECORD (SYSX, SAMP, + SEQ) KEYS AND POWER ON. AT PROMPT PRESS START TO RE-INITIALIZE.
PEAVEY	MULTIFEX	HOLD THE 2 KEYS NEXT TO DISPLAY AND POWER ON.
PEAVEY	PC 1600	HOLD THE UTILITY + ENTER KEYS AND POWER ON.
PEAVEY	PC4-X	HOLD THE MASTER + MIDI KEYS AND POWER ON.
PEAVEY	PC4-XL	HOLD THE MASTER + MIDI KEYS AND POWER ON.
PEAVEY	PGP 20	HOLD THE A/B + MUTE KEYS AND POWER ON.
PEAVEY	PLM 8128	PRESS TWO RIGHT-MOST SOFT KEYS IN BOTTOM ROW AND POWER ON. (VCA CAL UNAFFECTED)
PEAVEY	PLM 8128E	HOLD THE SOLO AND MUTE KEYS, POWER ON. (VCA CAL UNAFFECTED)
PEAVEY	PROFEX	HOLD THE PLAY AND MIDI KEYS THEN POWER ON.
PEAVEY	PROFEX II	HOLD THE PLAY AND GLOBAL BUTTONS, POWER ON.
PEAVEY	PROGRAMAX	HOLD THE A/B AND MUTE KEYS THEN POWER ON.
PEAVEY	PV LITE 3000	FACTORY PRESETS: HOLD CHASE + AUTO SOUND, POWER ON. HARD RESET: HOLD DOWN + STORE, POWER ON. IN BOTH CASES, HOLD UNTIL 00 APPEARS IN THE DISPLAY.
PEAVEY	SDR 20/20	HOLD THE PLAY AND STORE KEYS WHILE POWERING ON.
PEAVEY	SPECTRUM ANALOG FI	HOLD THE DEC AND EXEC BUTTONS, POWER ON. (TO INIT. FOR USE W/ CYBERBASS, HOLD DEC AND BYPASS THEN POWER ON.
PEAVEY	SPECTRUM BASS II	HOLD THE + AND - BUTTONS THEN POWER ON.
PEAVEY	SPECTRUM ORGAN	HOLD THE + AND - BUTTONS THEN POWER ON.
PEAVEY	SPECTRUM SYNTH	HOLD THE + AND - BUTTONS THEN POWER ON.
PEAVEY	ULTRAVERB	HOLD THE - AND 5 KEYS THEN POWER ON.
PEAVEY	ULTRAVERB II	HOLD THE + AND 9 BUTTONS THEN POWER ON.
ROLAND		
ROLAND	A-220	HOLD B AND MEMORY THEN POWER ON.
ROLAND	A-30	HOLD WRITE WHILE POWERING ON (30 SECONDS)
ROLAND	A-33	HOLD WRITE WHILE POWERING ON (30 SECONDS)
ROLAND	A-37	HOLD WRITE BUTTON AND POWER ON. DISPLAY SHOWS FACTORY SETUP AT COMPLETION.
ROLAND	A-50	HOLD 1ST+3RD+4TH BUTTONS UNDER DISPLAY, PRESS CHANNEL, THEN PRESS ANY CURSOR KEY.
ROLAND	A-80	HOLD 1ST+3RD+4TH BUTTONS UNDER DISPLAY, PRESS CHANNEL, THEN PRESS ANY CURSOR KEY.
ROLAND	A-880	HOLD SIGNAL AND MEMORY THEN POWER ON.
ROLAND	A-90	HOLD EDIT, POWER ON THEN PRESS ENTER. WITH VOICE EXPANDER BOARD: HOLD MANUAL, POWER ON, THEN PRESS ENTER.
ROLAND	A90EX	HOLD MANUAL BUTTON AND POWER ON. THEN PRESS ENTER.
ROLAND	ADA-8024	no rom reset.
ROLAND	ALPHA JUNO-1	no rom reset.
ROLAND	ALPHA JUNO-2	no rom reset.
ROLAND	AP-700	PWR ON, EXIT REPEATEDLY TO ANALYZER/FILTER SCREEN. CURSOR TO: MENU + ENTER, SYSTEM + ENTER, INIT + ENTER. USE VALUE SELECT ALL THEN EXEC + ENTER TWICE.
ROLAND	AR SERIES	no rom reset.

RESET- & INITIALIZE- PROCEDURES.

ROLAND	AT SERIES	HOLD ONE TOUCH PROGRAM + POWER ON.
ROLAND	AX-1	HOLD WRITE BUTTON + POWER ON (HOLD 30 SECONDS).
ROLAND	AXIS-1	POWER ON. HOLD FUNCTION; PRESS F#0, C#2, AND D#2 KEYS.
ROLAND	CA-30	RESETS EVERY TIME TOGGLED OF AND THEN ON.
ROLAND	CDX1	PRESS UTILITY. CURSOR RIGHT, SELECT INIT AND PRESS ENTER THEN CURSOR TO GLOBAL. PRESS ENTER THREE TIMES.
ROLAND	CR (ALL OTHER)	no rom reset.
ROLAND	CR-80	DEL + REPEAT + POWER ON, THEN PRESS ENTER.
ROLAND	CSQ SERIES	no rom reset.
ROLAND	D-10	HOLD TUNE/FUNCTION AND WRITE WHILE POWERING ON.
ROLAND	D-110	no rom reset.
ROLAND	D-20	HOLD TUNE/FUNCTION AND WRITE WHILE POWERING ON.
ROLAND	D-5	no rom reset.
ROLAND	D-50	TUNE/FUNCTION AND MIDI DATA INIT: HOLD 0 AND DATA TRANSFER, POWER ON. PATCH + REVERB MUST BE LOADED FROM CARD OR SYSEX FILE.
ROLAND	D-550	TUNE/FUNCTION AND MIDI DATA INIT: HOLD PATCH BANK 2, PATCH NUMBER6, AND ENTER, POWER ON. PATCH AND REVERD DATA MUST BE LOADED FROM CARD OR SYSEX FILE.
ROLAND	D-70	HOLD BANK 8 WHILE POWERING ON. PRESS ENTER, THENPRESS WRITE TWICE.
ROLAND	D2	HOLD WRITE + PRESS SYSTEM. PRESS ENTER TWICE.
ROLAND	DDR-30	HOLD #1 BUTTON AND POWER ON.
ROLAND	DEP-3	MEMORY NO UP AND DOWN BUTTONS WHILE POWERING ON.
ROLAND	DEP-5	MEMORY NO UP AND DOWN BUTTONS WHILE POWERING ON.
ROLAND	DJ-70	no rom reset.
ROLAND	DJ-70MKII	no rom reset.
ROLAND	DM SERIES	no rom reset.
ROLAND	DR-202	HOLD MUTE + ROLL AND POWER ON. VALUE DIAL TO SELECT 'ALL', THEN PRESS TAP/ENTER TWICE.
ROLAND	DR-5	FRET LEFT + FRET RIGHT + POWER ON; 2 X ENTER.
ROLAND	DR-550	HOLD -1 AND +1 AND POWER ON, THEN PRESS START.
ROLAND	DR-550MKII	HOLD -1 AND +1 AND POWER ON, THEN PRESS START.
ROLAND	DR-660	UTILITY THEN CURSOR TO SELECT (8) INIT; 2 X ENTER.
ROLAND	DR-670	HOLD RECORD + STOP/CONT BUTTONS AND POWER ON. PRESS ENTER TWICE.
ROLAND	DR-770	PRESS UTILITY AND THEN CURSOR RT TO 9.F.RST. VALUE DIAL TO SELECT ALL, AND THEN PRESS ENTER TWICE.
ROLAND	DS-330	HOLD REVERB + SPLIT AND POWER ON; PRESS YES.
ROLAND	E-5	no rom reset.
ROLAND	E-10	HOLD WRITE WHILE TURNING POWER ON.
ROLAND	E-12	no rom reset.
ROLAND	E-14US	resets at power on.
ROLAND	E-15	resets at power on.
ROLAND	E-16	resets at power on.
ROLAND	E-20	HOLD WRITE + POWER ON.
ROLAND	E-28US	resets at power on.
ROLAND	E-30	HOLD WRITE + POWER ON.
ROLAND	E-35	HOLD REC/PUNCH IN + POWER ON.
ROLAND	E-36	RECORDER + POWER ON.
ROLAND	E-56	HOLD WRITE + POWER ON.
ROLAND	E-66	RECORD (IN DISK RECORDER SECTION) + POWER ON.
ROLAND	E-68US	HOLD WRITE + POWER ON.
ROLAND	E-70	HOLD WRITE + POWER ON.
ROLAND	E-86	<>HOLD WRITE + POWER ON.
<-ROLAND	E-96	HOLD WRITE + POWER ON.
ROLAND	E300	PRESS UTILITY. USE BUTTONS BELOW 'PAGE' TO SELECT FACTORY PRESET. PRESS EXECUTE, THEN OK. WHEN RESET COMPLETE POWER OFF, THEN ON.
ROLAND	E500	PRESS UTILITY. USE BUTTONS BELOW 'PAGE' TO SELECT FACTORY PRESET. PRESS EXECUTE, THEN OK. WHEN RESET COMPLETE POWER OFF, THEN ON.
ROLAND	E600	PRESS UTILITY. USE PAGE BUTTONS TO SELECT FACTORY PRESET, THEN EXECUTE.
ROLAND	EF303	HOLD SHIFT AND THEN POWER ON. PRESS WRITE TWICE, THEN POWER OFF AN ON AGAIN.
ROLAND	EM-10	HOLD WRITE AND POWER ON.
ROLAND	EM-101	no rom reset.
ROLAND	EM-15	HOLD THE WRITE BUTTON WHILE TURNING ON THE POWER.
ROLAND	EM-20	HOLD WRITE AND POWER ON.
ROLAND	EM-25	HOLD THE WRITE BUTTON WHILE TURNING ON THE POWER.
ROLAND	EM-30	HOLD WRITE AND POWER ON.
ROLAND	EM-303	resets at power on.
ROLAND	EM-305	resets at power on.
ROLAND	EM-50	HOLD WRITE AND POWER ON.
ROLAND	EP (ALL OTHER)	no rom reset.
ROLAND	EP-3	resets at power on.
ROLAND	EP-5	HOLD REC + PLAY, PRESS STRINGS, POWER OFF / ON.
ROLAND	EP-7	HOLD REC + PLAY, PRESS STRINGS, POWER OFF / ON.
ROLAND	EP-707	resets at power on.
ROLAND	EP-75	HOLD REC AND POWER ON.
ROLAND	EP-7MKII	HOLD REC + PLAY, PRESS STRINGS, POWER OFF AND ON.
ROLAND	EP-85	HOLD REC AND POWER ON.
ROLAND	EP-9	HOLD REC + PLAY, PRESS CHOIR, POWER OFF AND ON.
ROLAND	EP-95	HOLD REC BUTTON WHILE POWERING ON.
ROLAND	FA76	PRESS MENU THEN UP/DOWN TO FACTORY PRESET. PRESSF8 TWICE (SELECT THEN EXECUTE) TO RESET.
ROLAND	FANTOM	PRESS MENU THEN UP/DOWN TO FACTORY PRESET. PRESSF8 TWICE (SELECT THEN EXECUTE) TO RESET.
ROLAND	FC-100	no rom reset.
ROLAND	FC-100MKII	HOLD #1 + #2 + #8 AND POWER ON.
ROLAND	FC-200	HOLD #10 AND POWER ON, THEN PRESS CTL PEDAL.
ROLAND	FG-10	HOLD CLEAR AND EXIT THEN POWER ON.
ROLAND	FG-1000	HOLD CLEAR AND EXIT THEN POWER ON.
ROLAND	FP-1	resets at power on.
ROLAND	FP-8	PRESS FUNC AND RELEASE HOLD PIANO PRESS FUNC AGAIN.
ROLAND	FP-9	resets at power on.
ROLAND	G-600	HOLD WRITE AND POWER ON.
ROLAND	G-800	HOLD WRITE, THEN POWER ON.
ROLAND	GC-8	no rom reset.
ROLAND	GI-10	HOLD PARAMETER + AND -, POWER ON THEN PRESS VALUE +.
ROLAND	GM-70	POLY MODE: HOLD PLAY, GENERAL EDIT, + IND EDIT THEN POWER ON. MONO MODE: HOLD TUNE, CONTROL ASSIGN, AND DATA TRANSFER THEN POWER ON.
ROLAND	GP-100	HOLD IN PARAMETER KNOB, POWER ON, PRESS WRITE.
ROLAND	GP-16	HOLD #6, #7, #8, THEN POWER ON. USE FUNCTION LEFT AND RUGHT TO SELECT "2. ALL FACTORY PRESET"THEN PRESS WRITE 3 TIMES.
ROLAND	GP-8	no rom reset.
ROLAND	GR (ALL OTHER)	no rom reset.
ROLAND	GR-09	HOLD PEDAL #2 THEN POWER ON. PRESS VALUE+ THEN PRESS EDIT/PLAY.
ROLAND	GR-1	HOLD WRITE/COPY THEN POWER ON THEN PRESS YES.
ROLAND	GR-30	HOLD PEDAL #2, POWER ON. PRESS PATCH + TO SELECT INIT. PRESS EDIT/PLAY, THEN PATCH + AND - SIMULTANEOUSLY.
ROLAND	GR-33	PRESS SYSTEM THEN PARAMETER, USE VALUE DIAL TO SELECT ALL. PRESS WRITE TWICE.
ROLAND	GR-50	no rom reset.

RESET- & INITIALIZE- PROCEDURES.

ROLAND	GS-6	no rom reset.
ROLAND	GT-3	HOLD MOD AND SFX AND POWER ON. PRESS WRITE.
ROLAND	GT-5	HOLD MOD + FEED BACKER/SLOW GEAR, POWER ON. THEN PRESS WRITE. /TD>
ROLAND	GX-700	PRESS TUNER/UTILITY. USE PARAMETER LEFT AND RIGHT TO SELECT FACT INIT. CURSOR TO LEFT, DIAL SYSTEM, THEN RIGHT AND DIAL P#100. PRESS WRITE THEN TUNER/UTILITY.
ROLAND	HP (ALL OTHER)	resets at power on.
ROLAND	HP-100	no rom reset.
ROLAND	HP-300	no rom reset.
ROLAND	HP-400	no rom reset.
ROLAND	HS SERIES	no rom reset.
ROLAND	JD-800	PRESS DATA TRANSFER. PAGE UP TO SELECT FACTORY PRESET, PRESS YES.
ROLAND	JD-990	HOLD EXIT AND PRESS UTILITY. PRESS F6 THEN F5.
ROLAND	JP-6	no rom reset.
ROLAND	JP-8	no rom reset.
ROLAND	JP-8000	HOLD SHIFT, PRESS INIT/BULK. PRESS BUTTON 7, USE UP/DOWN (SELECT FACTORY RESET), PRESS WRITE TO SELECT FACTORY PRESETS.
ROLAND	JS-30	HOLD RECORD BUTTON (SEQUENCER SECTION), POWER ON.
ROLAND	JUN0-106	no rom reset.
ROLAND	JUN0-60	no rom reset.
ROLAND	JUN0-1	no rom reset.
ROLAND	JUN0-2	no rom reset.
ROLAND	JUN0-6	no rom reset.
ROLAND	JUPITER-6	no rom reset.
ROLAND	JUPITER-8	no rom reset.
ROLAND	JV-1000	HOLD NUMBER 8, POWER ON. PRESS ENTER THEN WRITE.
ROLAND	JV-1080	PRESS UTILITY. CURSOR DOWN ONCE THEN RIGHT 3 TIMES TO FACTORY PRESET. PRESS ENTER TWICE, THEN UTILITY.
ROLAND	JV-2080	PRESS UTILITY. PRESS F6 TWICE TO MENU 3. PRESS F1 THEN F6. IF REQ'D USE VALUE DIAL TO TURN OFF MEM. PROT. AND PRESS F6 TWICE.
ROLAND	JV-30	PRESS CHORUS + REVERB (ABOVE INIT) TOGETHER THEN PRESS VALUE UP.
ROLAND	JV-35	PRESS CONTROL + MASTER TOGETHER. USE PARAMETER UP AND DOWN TO SELECT ALL. PRESS VALUE UP.
ROLAND	JV-50	PRESS CONTROL + MASTER TOGETHER. USE PARAMETER UP AND DOWN TO SELECT ALL. PRESS VALUE UP.
ROLAND	JV-80	HOLD NUMBER 8, POWER ON. PRESS ENTER THEN WRITE.
ROLAND	JV-880	PRESS UTILITY, USE DATA DIAL TO SELECT FACTORY PRESET. PRESS ENTER TWICE.
ROLAND	JV-90	HOLD NUMBER 8, POWER ON. PRESS ENTER THEN WRITE.
ROLAND	JW-50	PRESS TUNE/FUNCTION. PRESS F5 THEN F4 THEN F3 THEN F4.
ROLAND	JX-1	HOLD WRITE AND FLUTE THEN POWER ON.
ROLAND	JX-10	no rom reset.
ROLAND	JX-3P	no rom reset.
ROLAND	JX-8P	no rom reset.
ROLAND	KR-100	resets at power on.
ROLAND	KR-3000	HOLD FROM AND TO BUTTONS, THEN PRESS WRITE.
ROLAND	KR-33	resets at power on.
ROLAND	KR-350	HOLD LOAD AND SAVE, THEN PRESS WRITE.
ROLAND	KR-3500	HOLD LOAD AND SAVE, THEN PRESS WRITE.
ROLAND	KR-370	resets at power on.
ROLAND	KR-4500	HOLD LOAD AND SAVE, THEN PRESS WRITE.
ROLAND	KR-4700	HOLD LOAD AND EDIT, THEN PRESS SAVE.
ROLAND	KR-500	HOLD FROM AND TO, THEN PRESS WRITE.
ROLAND	KR-5000	HOLD LOAD AND EDIT, THEN PRESS SAVE.
ROLAND	KR-55	HOLD MIDI FUNCTION AND PRESS CARDS (5 SECONDS).
ROLAND	KR-5500	HOLD LOAD AND SAVE, THEN PRESS WRITE.
ROLAND	KR-575	PRESS FUNCTION; PAGE TO 'FACTORY RESET'. TOUCH EXECUTE, THEN OK.
ROLAND	KR-577	PRESS UTILITY; USE BUTTONS BELOW PAGE TO SELECT 'FACTORY PRESET'. PRESS EXECUTE, THEN OK.
ROLAND	KR-650	HOLD LOAD AND SAVE, THEN PRESS WRITE.
ROLAND	KR-770	HOLD PART VOLUME ACCOMP, PRESS TRACK 2 + 4 BUTTONS SIMULTANEOUSLY. USE PART VOLUME ACCOMP REPEATEDLY TO GET FACTORY SET-UP LOAD. WHEN DONE PWR OFF/ON.
ROLAND	KR-977	PRESS FUNCTION; USE PAGE BUTTONS TO 'FACTORY RESET'. TOUCH EXECUTE, THEN OK.
ROLAND	LVC-1N	HOLD ENTER BUTTON THEN POWER ON.
ROLAND	M-760	HOLD EDIT, PRESS WRITE. PARAMETER UP/DOWN TO SELECT ALL + PRESS WRITE. ON COMPLETION PRESS EDIT TO RETURN TO PLAY.
ROLAND	M-DC1	HOLD F3 AND THEN POWER ON.
ROLAND	M-GS64	HOLD F3 AND THEN POWER ON. CONTRIBUTED-: HOLD SELECT AND PRESS F4, PRESS F3 AND THEN PRESS ENTER.
ROLAND	M-OC1	HOLD F3 AND THEN POWER ON.
ROLAND	M-SE1	HOLD F3 AND THEN POWER ON.
ROLAND	M-VS1	HOLD F3 AND THEN POWER ON.
ROLAND	MBD1	HOLD F3 AND THEN POWER ON.
ROLAND	MC-303	HOLD SHIFT AND THEN POWER ON, THEN PRESS ENTER.
ROLAND	MC-307	PRESS SYSTEM, THEN F2 (UTIL). CURSOR DN TO FACTORY RESET. PRESS F1 AND THEN F4.
ROLAND	MC-50	no rom reset.
ROLAND	MC-505	HOLD SHIFT BUTTON AND POWER ON. PRESS ENTER.
ROLAND	MC-50MKII	no rom reset.
ROLAND	MC-80	no rom reset.
ROLAND	MC-80EX	no rom reset.
ROLAND	MDC-1	HOLD F3 AND POWER ON.
ROLAND	ME-10	HOLD BANK DOWN PEDAL, THEN PRESS WRITE.
ROLAND	ME-30	HOLD PARAMETER RIGHT AND VALUE WHILE POWERING ON. PRESS WRITE/COPY.
ROLAND	ME-33	HOLD EZ TONE AND AMP/EFFECT RIGHT WHILE POWERING ON. THEN PRESS WRITE.
ROLAND	ME-5	HOLD PEDALS 1 AND 2, POWER ON; PRESS WRITE IMMEDIATELY.
ROLAND	ME-6	HOLD LEFT + DOWN AND POWER ON; THEN PRESS WRITE.
ROLAND	ME-6B	HOLD LEFT + DOWN AND POWER ON; THEN PRESS WRITE.
ROLAND	ME-8	HOLD LEFT + DOWN AND POWER ON; PRESS WRITE/COPY.
ROLAND	ME-8B	HOLD PARAMETER LEFT + DOWN BUTTONS, THEN PRESS WRITE/COPY.
ROLAND	ME-X	HOLD PARAMETER LEFT + DOWN AND POWER ON, THEN PRESS WRITE.
ROLAND	MGS-64	HOLD F3 AND POWER ON.
ROLAND	MK-60	no rom reset.
ROLAND	MK-80	HOLD WRITE, PRESS EDIT. HOLD LEFT AND RIGHT CURSOR BUTTONS AND PRESS UP.
ROLAND	MKB SERIES	no rom reset.
ROLAND	MKS-50	POLY MODE: HOLD NUMBER BUTTONS 4 AND 8 AND POWER ON.
ROLAND	MKS-50	MONO MODE: HOLD NUMBER BUTTONS 3 AND 7 AND POWER ON.
ROLAND	MMP-2	PRESS SYSTEM UNTIL LIGHTS ORANGE. USE PAGE LEFT/RIGHT BUTTONS TO SELECT INITIALIZE. USE LEFT VALUE TO SELECT ALL; PRESS ENTER TWICE.
ROLAND	MP SERIES	no rom reset.
ROLAND	MS-1	<>no rom reset.
ROLAND	MSE-1	HOLD F3 AND POWER ON.
ROLAND	MSQ-100	no rom reset.
ROLAND	MSQ-700	no rom reset.
ROLAND	MT-100	HOLD STOP, PRESS DELETE. AFTER THE DISPLAY FLASHES "ALL CLEAR" PRESS EXECUTE.
ROLAND	MT-120	HOLD REPEAT, SONG (BLUE), AND PLAY, POWER ON. PRESS FWD REPEATEDLY UNTIL READS T13. PRESS PLAY THEN RECORD, THEN POWER OFF/ON.
ROLAND	MT-120S	HOLD REPEAT, SONG (BLUE), AND PLAY, POWER ON. PRESS FWD REPEATEDLY UNTIL READS T13. PRESS PLAY THEN RECORD, THEN POWER OFF/ON.

RESET- & INITIALIZE- PROCEDURES.

ROLAND	MT-200	HOLD REPEAT, SONG (BLUE), AND PLAY, POWER ON. USE DIAL TO SELECT T-15 ON DISPLAY. PRESS PLAY THEN RECORD, THEN POWER OFF/ON.
ROLAND	MT-300	PRESS MENU, DIAL TO FACTORY PRESET. PRESS ENTER TWICE.
ROLAND	MT-32	HOLD MASTER VOLUME, PRESS RHYTHM PART, PRESS PART 1.
ROLAND	MT-80	resets at power on.
ROLAND	MV-30	no rom reset.
ROLAND	MVS-1	HOLD F3 AND POWER ON.
ROLAND	OCTAPAD	HOLD MIDI CH AND NOTE NUMBER, POWER ON. POWER OFF, THEN POWER ON AGAIN.
ROLAND	OCTAPAD II	HOLD BOTH VALUE BUTTONS, POWER ON.
ROLAND	P-330	no rom reset.
ROLAND	P-55	HOLD BOTH INSTRUMENT BUTTONS, POWER ON, THEN PRESS PARAM 1.
ROLAND	PAD-8	HOLD MIDI CH AND NOTE NUMBER, POWER ON. POWER OFF, THEN POWER ON.
ROLAND	PAD-80	HOLD BOTH VALUE BUTTONS, POWER ON.
ROLAND	PC-150	HOLD COMMAND (LEFT), POWER ON.
ROLAND	PC-200	HOLD THE 2 BUTTONS UNDER "STANDARD", POWER ON.
ROLAND	PIANO PLUS (ALL)	no rom reset.
ROLAND	PK-5	HOLD OCT/PARAM AND POWER ON.
ROLAND	PK-7	no rom reset.
ROLAND	PLANET-P	no rom reset.
ROLAND	PLANET-S	no rom reset.
ROLAND	PM-16	no rom reset.
ROLAND	PMA-5	HOLD VALUE, POWER ON. TOUCH 2 CAL. POINTS TOP RIGHT + BOTTOM LEFT OF DISPLAY W/ TOUCH PEN. DISPLAYS COMPLETED THEN INITIALIZE, TOUCH EXEC.
ROLAND	PRO-E	HOLD WRITE, POWER ON.
ROLAND	R-5	HOLD PAGE + SELECT AND POWER ON. PRESS ENTER TWICE AT PROMPTS.
ROLAND	R-70	HOLD MIDI + ASSIGN AND POWER ON. PRESS YES TWICE AT PROMPTS.
ROLAND	R-8	HOLD CURSOR PAGE AND PARAM SELECT THEN POWER ON. PRESS ENTER TWICE.
ROLAND	R-880	no rom reset.
ROLAND	R-8M	HOLD CURSOR RIGHT AND ENTER, POWER ON. PRESS ENTER TWICE AT PROMPTS.
ROLAND	RA-50	HOLD WRITE THEN POWER ON.
ROLAND	RA-90	HOLD WRITE THEN POWER ON.
ROLAND	RA-95	HOLD REC, POWER ON.
ROLAND	RD-150	HOLD THE PLAY AND REC BUTTONS WHILE POWERING ON.
ROLAND	RSP-550	POWER ON WHILE HOLDING PROG PAGE UP AND DOWN, THEN PRESS WRITE.
ROLAND	SB-55	POWER ON WHILE HOLDING CLEAR BUTTON.
ROLAND	SC-155	POWER IN STANDBY MODE. HOLD BOTH INSTRUMENT BUTTONS, PRESS POWER ON AND THEN PRESS ALL.
ROLAND	SC-33	HOLD SPLIT AND REVERB WHILE POWERING ON, THEN PRESS YES.
ROLAND	SC-50	HOLD BOTH INSTRUMENT BUTTONS AND POWER ON. THEN PRESS ALL.
ROLAND	SC-55	HOLD BOTH INSTRUMENT BUTTONS AND POWER ON. THEN PRESS ALL.
ROLAND	SC-55MKII	HOLD BOTH INSTRUMENT BUTTONS AND POWER ON. THEN PRESS ALL.
ROLAND	SDD-320	no rom reset.
ROLAND	SH-101	no rom reset.
ROLAND	SH-2000	no rom reset.
ROLAND	SN700	no rom reset.
ROLAND	SP700	no rom reset.
ROLAND	SPD-11	HOLD ALL/ENTER WHILE POWERING ON. PRESS ALL/ENTER AGAIN.
ROLAND	SPD-8	HOLD EDIT BUTTON WHILE POWERING ON.
ROLAND	SRV-1000	no rom reset.
ROLAND	TB-303	no rom reset.
ROLAND	TD-10	HOLD SETUP AND EXIT KEYS AND TURN POWER ON, THEN PRESS F4.
ROLAND	TD-7	PRESS SYSTEM. CURSOR TO 'INT' AND PRESS ENTER. CURSOR TO 'HIHAT' THEN DATA DIAL TO SELECT 'ALL'. PRESS ENTER TWICE.
ROLAND	TD-8 V CUSTOM	PRESS SETUP THEN [F3 (MENU)]. PRESS INC/+, ROTATE THE VALUE DIAL, OR PRESS CURSOR TO MOVE THE CURSOR TO "RESET".
ROLAND	TR-505	HOLD PATTERN GROUP A AND MODE AND POWER ON.
ROLAND	TR-626	HOLD TRACK #1 AND MODE AND POWER ON.
ROLAND	TR-707	HOLD TRACK WRITE AND PATTERN 1 AND POWER ON.
ROLAND	TR-727	HOLD TRACK WRITE AND PATTERN 1 AND POWER ON.
ROLAND	TR-808	no rom reset.
ROLAND	TR-909	HOLD TRACK #1 AND PATTERN #1 AND POWER ON.
ROLAND	U-110	HOLD THE EDIT AND PART BUTTONS AND POWER ON.
ROLAND	U-20	no rom reset.
ROLAND	U-220	no rom reset. You need a U-220 Factory-Pre-set memory-cart. 1. Memory press Jump and value up arrow 2. enter ROM play mode 3. hold mark and jump press enter 4. hold mark press part inst right arrow 5. press enter 6. press value 7. hold mark & jump & press exit
ROLAND	VP-70	HOLD MIDI, PLAY, AND VOICE EXP AND POWER ON.
ROLAND	VS-1680	no rom reset.
ROLAND	VS-1680EX	no rom reset.
ROLAND	VS-1824	no rom reset.
ROLAND	VS-1824CD	no rom reset.
ROLAND	VS-1880	no rom reset.
ROLAND	VS-2480	no rom reset.
ROLAND	VS-2480CD	no rom reset.
ROLAND	VS-840	no rom reset.
ROLAND	VS-840EX	no rom reset.
ROLAND	VS-840GX	no rom reset.
ROLAND	VS-880	no rom reset.
ROLAND	VS-880EX	no rom reset.
ROLAND	VS-890	no rom reset.
ROLAND	VT-1	HOLD PRESET/USER BUTTON AND POWER ON.
ROLAND	W-30	no rom reset.
ROLAND	W-50	PRESS CONTROL AND MASTER BUTTONS SIMULTANEOUSLY. USE PARAMETER UP AND DOWN BUTTONS TO SELECT ALL. PRESS VALUE UP BUTTON.
ROLAND	XP-50	PRESS DISK UTIL, SELECT SOUND, THEN PROTECT, SETMEM PROTECT OFF. EXIT, SELECT PRESET AND PRESS ENTER. (REMEMBER TO SET MEM PROTECT BACK ON).
ROLAND	XV-5050	PRESS UTILITY AND CURSOR LEFT BUTTONS. VALUE DIAL TO SELECT FACTORY RESET AND PRESS ENTER TWICE.
ROLAND	XV-5080	PRESS SYSTEM/UTILITY SO LIGHT BLINKING. PRESS F6 AND THEN F5. PRESS F6 (EXECUTE) AGAIN.
ROLAND	XV-88	PRESS UTILITY, CURSOR DOWN TO UTIL PAGE 2. PRESS F4 (BASS), PRESS ENTER TWICE.
YAMAHA		
YAMAHA	02R	HOLD "CURSOR LEFT" AND POWER ON.
YAMAHA	CLP-100	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-121	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-121S	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-122	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-122S	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-123	HOLD KEY "F0" OR KEY "B1" AND POWER ON.

YAMAHA	CLP-124	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-133	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-134	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-152	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-152S	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-153	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-153S	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-153SG	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-154	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-154F	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-154S	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-155	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-156	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-157	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-158	HOLD KEY "F0" OR KEY "B1" AND POWER ON.
YAMAHA	CLP-20	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-250	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-260	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-30	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-311	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-350	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-360	HOLD KEY "F0" AND POWER ON.
YAMAHA	CLP-411	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-500	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-511	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-550	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-555	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-560	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-570	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-611	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-705	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-711	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-760	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-811	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLP-911	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLW-12	HOLD KEY "B1" AND POWER ON.
YAMAHA	CLW-14	HOLD KEY "B1" AND POWER ON.
YAMAHA	CS1X	HOLD BUTTONS 7, 8, AND 9, AND POWER ON.
YAMAHA	CS2X	HOLD BUTTONS 7, 8, AND 9, AND POWER ON.
YAMAHA	CVP-105	HOLD DOWN THE RIGHTMOST KEY (C7) AND POWER ON.
YAMAHA	CVP-35	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-45	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-49	HOLD KEY "F0" AND POWER ON.
YAMAHA	CVP-50	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-55	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-59	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-65	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-69	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-69A	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-70	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-75	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-79	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-79A	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-83	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-83S	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-85	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-85A	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-87	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-87A	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-89	HOLD KEY "B1" AND POWER ON.
YAMAHA	CVP-89WH	HOLD KEY "B1" AND POWER ON.
YAMAHA	D2040	PRESS 'PEQ/D.ATT' KEY OF CHANNEL 1 AND 'LIMIT/COMP' OF CHANNEL 3 AND POWER ON.
YAMAHA	D5000	PRESS STORE AND POWER THEN PRESS RECALL.
YAMAHA	DD-11	no rom reset.
YAMAHA	DDL3	RUN TEST PROGRAM. PRESS 'RECALL' AND THEN PRESS 'STORE'.
YAMAHA	DEQ5	HOLD THE 'L' AND 'FLAT' KEYS AND POWER UNIT ON. PRESS 'RECALL'.
YAMAHA	DEQ5E	RUN TEST MODE. WHEN TEST 10 IS PERFORMED, UNIT IS INITIALIZED AND FACTORY PRESETS ARE RESTORED.
YAMAHA	DEQ7	HOLD DELAY/LEVEL AND PROTECT ON/OFF, POWER ON.
YAMAHA	DMP-11	PRESS FADER FLIP, PARAMETER LEFT, POWER ON.
YAMAHA	DMP-7	PRESS FADER FLIP, PARAMETER LEFT, POWER ON.
YAMAHA	DMP9-16/8	PRESS MEMORY [RECALL], RETURN [SEL], [UTILITY], THEN POWER ON.
YAMAHA	DOU10	PRESS SHIFT AND POWER ON.
YAMAHA	DTS70	PRESS UTILITY AND STORE WHILE POWERING ON.
YAMAHA	DX-711	INSERT ROM CARTRIDGE AND POWER ON.
YAMAHA	DX-7S	INSERT ROM CARTRIDGE AND POWER ON.
YAMAHA	EMP-700	PRESS F1 AND ^ WHILE POWERING ON.
YAMAHA	FX-500	HOLD COMP AND MOD WHILE POWERING ON.
YAMAHA	FX-770	HOLD COMP AND PLAY WHILE POWERING ON.
YAMAHA	GW-10	HOLD CHO WHILE POWERING ON.
YAMAHA	GW-33	HOLD DOWN/NO AND UP/YES WHILE POWERING ON.
YAMAHA	MDP-2	HOLD SHIFT AND POWER ON.
YAMAHA	MFC-10	HOLD MEMORY, EDIT, AND FC EDIT AND POWER ON.
YAMAHA	MLP-11	HOLD KEY "B1" AND POWER ON.
YAMAHA	MLP51	HOLD KEY "F0" AND POWER ON.
YAMAHA	MU-90	HOLD ENTER AND UTIL WHILE POWERING ON.
YAMAHA	P-100	HOLD KEY "B1" AND POWER ON.
YAMAHA	P-150	HOLD KEY "B1" AND POWER ON.
YAMAHA	P-300	HOLD KEY "B1" AND POWER ON.
YAMAHA	P-500	HOLD KEY "B1" AND POWER ON.
YAMAHA	PDP-300	HOLD KEY "F0" AND POWER ON.
YAMAHA	PDP-400	HOLD KEY "B1" AND POWER ON.
YAMAHA	PDP-500	HOLD KEY "B1" AND POWER ON.
YAMAHA	PROMIX 01	PRESS STORE AND INC+ WHILE POWERING ON.
YAMAHA	PSR-220	PRESS YES AND NO WHILE POWERING ON.
YAMAHA	PSR-230	PRESS YES AND NO WHILE POWERING ON.
YAMAHA	PSR-410	HOLD [+] AND [-] AND POWER ON.
YAMAHA	PSR-420	HOLD [+] AND [-/NO] AND POWER ON.
YAMAHA	PSR-510	HOLD [+] AND [-] AND POWER ON.
YAMAHA	PSR-520	HOLD [+] AND [-/NO] AND POWER ON.
YAMAHA	PSR-530	HOLD RIGHT-MOST WHITE KEY ON THE KEYBOARD WHILE TURNING ON THE POWER.

RESET- & INITIALIZE- PROCEDURES.

YAMAHA	PSR-6000	UTILITY MODE, RECALL PRESET DATA, SELECT ALL DATA.
YAMAHA	PSR-620	HOLD [+ /YES] AND [- /NO] AND POWER ON.
YAMAHA	PSR-6300	HOLD KEY "C6" AND POWER ON.
YAMAHA	PSR-70	HOLD KEY "C5" AND POWER ON.
YAMAHA	PSR-9000	HOLD DEMO AND POWER ON.
YAMAHA	PSR-A3	HOLD [+ /YES] AND [- /NO] AND POWER ON.
YAMAHA	REV-100	PRESS STORE BUTTON WHILE POWERING ON. THEN PRESS V AND STORE.
YAMAHA	RX-8	HOLD STOP/CONTINUE, +1 /YES, AND -1 /NO AND POWER ON.
YAMAHA	SPX-90	HOLD BALANCE, FOOT TRIGGER AND POWER ON.
YAMAHA	SPX-90II	HOLD BALANCE, FOOT TRIGGER AND POWER ON.
YAMAHA	SPX990	HOLD PAGE, STORE, AND BYPASS WHILE POWERING ON. also test #8 is ram initialization.
YAMAHA	TMX	HOLD UTILITY AND STORE THEN POWER ON.
YAMAHA	YDP-200	HOLD KEY "F0" OR KEY "B1", WHILE POWERING ON.
YAMAHA	YDP-300	HOLD KEY "F0" OR KEY "B1", WHILE POWERING ON.
YAMAHA	YDP-301	HOLD KEY "B1", WHILE POWERING ON.
YAMAHA	YDP-88	HOLD KEY "B1", WHILE POWERING ON.
YAMAHA	YDP-88II	HOLD KEY "B1", WHILE POWERING ON.
ZOOM		
ZOOM	505	HOLD THE STORE BUTTON WHILE POWERING ON. DISPLAY FLASHES "AL"; PRESS STORE AGAIN.
ZOOM	506II	HOLD STORE BUTTON WHILE PLUGGING IN ADAPTOR. PRESS STORE ONCE MORE.